



中国认可
国际互认
检测
TESTING
CNAS L0823




Test No. KJ20201603

GUANG ZHOU INSTITUTE OF MICROBIOLOGY

TEST REPORT

Date Received: Apr. 08, 2020

Date Analyzed: Apr. 09, 2020

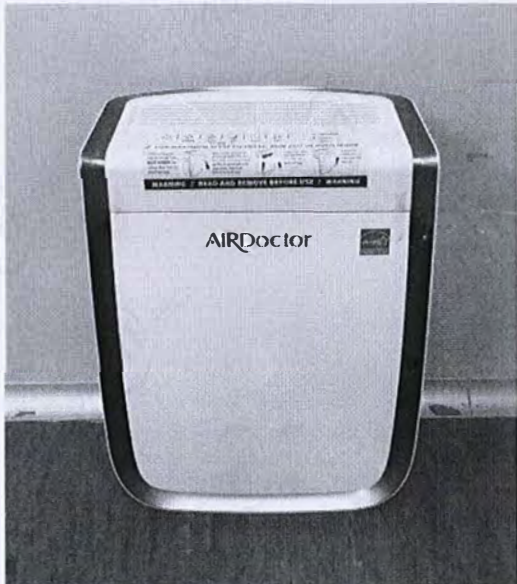Name of Sample	Air Purifier	Source of Sample	Delivery
Applicant	Air Doctor LLC	Client	Sherry Huang
Manufacturer	GUANGZHOU AIR DOCTOR LLC	Brand	AirDoctor
Type and Specification	AD3000	Quantity of Sample	1 Set (Two machines and a set of filters)
Date of Production	---	State of Sample	Machine
Batch Number	---	Packing of Sample	In box
Sample Picture			
Standard and Methods	GB 21551.3-2010 Antibacterial and cleaning function for household and similar electrical appliances-Particular requirements of air cleaner		
Items of Analysis	1. Eliminating Bacterial Rate (<i>Staphylococcus albus</i> 8032, <i>Staphylococcus aureus</i> ATCC 6538, <i>Escherichia coli</i> 8099, <i>Klebsiella pneumoniae</i> ATCC 4352, <i>Serratia marcescens</i> ATCC 14041, <i>P.Aeruginosa</i> ATCC 15442, <i>Candida albicans</i> ATCC 10231, <i>Aspergillus niger</i> ATCC 16404) 2. *Virus removal Rate (<i>E. Coli</i> Phage Phi-X174)		
Remarks	---		

To be continued



中国认可
国际互认
检测
TESTING
CNAS L0823



Test No. KJ20201603

GUANG ZHOU INSTITUTE OF MICROBIOLOGY

TEST REPORT

Date Received: Apr. 08, 2020

Date Analyzed: Apr. 09, 2020

Test Method for Air Purifier Disinfection Performance:

1. Test Equipment
 - 1) Strain: *Staphylococcus albus*, *Staphylococcus aureus*, *Escherichia coli*, *Klebsiella pneumoniae*, *Serratia marcescens*, *P.Aeruginosa*, *Candida albicans*
 - 2) Microbial aerosol generator: TK-3
 - 3) Culture media: NA, SDA
 - 4) Sampling equipment: six-stage sieve sampler
2. Test Conditions
 - 1) The volume of the test chamber: 30 m³
 - 2) Environment temperature: (20~25) °C
 - 3) Environment humidity: (50~70) %RH
3. Operation Conditions of the Air Purifier
Set the switch to position "The highest wind speed", "negative ions".
4. Test Procedure
 - 1) Get a slant culture (4~5 generation) which is incubated at 37 °C for 24 h, wash the culture from this slant with 10 mL broth, filter the liquid culture by aseptic cotton buds, and dilute this inoculums with broth as appropriate.
 - 2) The equipments are placed in the test chambers, close the door, and turn on the HEPA filter system. Simultaneously operate the environmental control devices until the temperature reaches (20~25)°C, relative humidity reaches (50~70)%. Turn off the chamber environmental control system.
 - 3) Release microbial aerosol: turn on the microbial aerosol generator, then turn on the ceiling fan, turn off the fan after 10 min, and let stand for 15 min.
 - 4) Original bacteria aerosols collected by six-stage sieve sampler.
 - 5) The air purifier is adjusted to the highest air cleaning mode setting for test (test group). Bacteria aerosols (control group and test group) are collected at 60 min .
 - 6) Choose 2 NA plates (the same batch) as the negative control, and culture them on the same condition with the samples.
 - 7) Run the test three times and take the mean as the final result.
5. Computational Formula

$$\text{Natural decay rate } N_t(\%) = \frac{V_0 - V_t}{V_0} \times 100$$

Where: V_0 = original bacteria count of control group; V_t = bacteria count after treatment of control group.

$$\text{Eliminating Bacterial Rate } K_t(\%) = \frac{V_1 \times (1 - N_t) - V_2}{V_1 \times (1 - N_t)} \times 100$$

Where: V_1 = original bacteria count of test group; V_2 = bacteria count after treatment of test group.

To be continued



中国认可
国际互认
检测
TESTING
CNAS L0823



Test No. KJ20201603

GUANG ZHOU INSTITUTE OF MICROBIOLOGY

TEST REPORT

Date Received: Apr. 08, 2020

Date Analyzed: Apr. 09, 2020

Test results

Number of Sample	Test Time (min)	Test Bacteria	Test Number	Control Group			Test Group		Eliminating Bacterial Rate K_t (%)
				Original Bacteria Count V_0 (cfu/m ³)	Bacteria Count after Treatment V_t (cfu/m ³)	Natural Decay Rate N_t (%)	Original Bacteria Count V_1 (cfu/m ³)	Bacteria Count after Treatment V_2 (cfu/m ³)	
KJ20201603-1	60	<i>Staphylococcus albus</i>	1	1.33×10 ⁵	1.03×10 ⁵	22.56	1.34×10 ⁵	7	99.99
			2	1.28×10 ⁵	1.01×10 ⁵	21.09	1.25×10 ⁵	7	99.99
			3	1.36×10 ⁵	1.10×10 ⁵	19.12	1.39×10 ⁵	7	99.99
			Mean						99.99
		<i>Staphylococcus aureus</i>	1	1.11×10 ⁵	8.93×10 ⁴	19.55	1.26×10 ⁵	7	99.99
			2	1.21×10 ⁵	9.79×10 ⁴	19.09	1.18×10 ⁵	7	99.99
			3	1.15×10 ⁵	9.15×10 ⁴	20.43	1.05×10 ⁵	7	99.99
			Mean						99.99
		<i>Escherichia coli</i>	1	1.44×10 ⁵	9.52×10 ⁴	33.89	1.37×10 ⁵	7	99.99
			2	1.39×10 ⁵	9.35×10 ⁴	32.73	1.28×10 ⁵	7	99.99
			3	1.47×10 ⁵	1.02×10 ⁵	30.61	1.41×10 ⁵	7	99.99
			Mean						99.99

Note: The negative control group was sterile growth.

To be continued



中国认可
国际互认
检测
TESTING
CNAS L0823



Test No. KJ20201603

GUANG ZHOU INSTITUTE OF MICROBIOLOGY

TEST REPORT

Date Received: Apr. 08, 2020

Date Analyzed: Apr. 09, 2020

Test results

Number of Sample	Test Time (min)	Test Bacteria	Test Number	Control Group			Test Group		Eliminating Bacterial Rate K_t (%)
				Original Bacteria Count V_0 (cfu/m ³)	Bacteria Count after Treatment V_t (cfu/m ³)	Natural Decay Rate N_t (%)	Original Bacteria Count V_1 (cfu/m ³)	Bacteria Count after Treatment V_2 (cfu/m ³)	
KJ20201603-1	60	<i>Klebsiella pneumoniae</i>	1	1.27×10 ⁵	9.45×10 ⁴	25.59	1.12×10 ⁵	7	99.99
			2	1.22×10 ⁵	9.31×10 ⁴	23.69	1.23×10 ⁵	7	99.99
			3	1.20×10 ⁵	8.99×10 ⁴	25.08	1.04×10 ⁵	7	99.99
			Mean						99.99
		<i>Serratia marcescens</i>	1	1.17×10 ⁵	8.37×10 ⁴	28.46	1.24×10 ⁵	7	99.99
			2	1.13×10 ⁵	7.75×10 ⁴	31.42	1.10×10 ⁵	7	99.99
			3	1.21×10 ⁵	8.54×10 ⁴	29.42	1.33×10 ⁵	7	99.99
			Mean						99.99
		<i>P.Aeruginosa</i>	1	1.38×10 ⁵	1.07×10 ⁵	22.46	1.30×10 ⁵	7	99.99
			2	1.33×10 ⁵	1.04×10 ⁵	21.80	1.42×10 ⁵	7	99.99
			3	1.40×10 ⁵	1.13×10 ⁵	19.29	1.39×10 ⁵	7	99.99
			Mean						99.99
		<i>Candida albicans</i>	1	1.05×10 ⁵	7.37×10 ⁴	29.81	1.13×10 ⁵	7	99.99
			2	9.07×10 ⁴	6.61×10 ⁴	27.12	1.06×10 ⁵	7	99.99
			3	1.08×10 ⁵	7.51×10 ⁴	30.46	1.19×10 ⁵	7	99.99
			Mean						99.99

Note: The negative control group was sterile growth.

To be continued



中国认可
国际互认
检测
TESTING
CNAS L0823



Test No. KJ20201603

GUANG ZHOU INSTITUTE OF MICROBIOLOGY

TEST REPORT

Date Received: Apr. 08, 2020

Date Analyzed: Apr. 09, 2020

Air Disinfection Test Method:

1. Test Equipment

- 1) Strain: *Aspergillus niger*
- 2) Microbial aerosol generator: TK-3
- 3) Culture media: PDA
- 4) Sampling equipment: six-stage sieve sampler

2. Test Conditions

- 1) The volume of the test chamber: 30 m³
- 2) Environment temperature: (20~25) °C
- 3) Environment humidity: (50~70) %RH

3. Operational Conditions of the Machine

Set the switch to position "The highest wind speed", "negative ions".

4. Test Procedure

- 1) To the 4th to 5th generation of *Aspergillus niger* roxell culture, add 5.0 ml to 10.0 ml of 0.05% (v / v) Tween 80 aqueous PBS solution, scrap the *Aspergillus niger* conidia in solution and transfer the spore suspension with glass beads in the flask, lightly shaking 1 min and filter removed hypha. Centrifuge 20min in the range of 5000r / min ~ 6000r / min . Then observe under the microscope (400 times) , if there are still hypha in the suspension, to be centrifuged. Diluted with physiological saline solution to the appropriate concentration before use.
- 2) The equipments are placed in the test chambers respectively, close the door, and open the HEPA filter. Simultaneously operate the environmental control devices until the experimental cabin temperature to be (20~25) °C, relative humidity to be (50~70) %, Turn off the chamber environmental control system.
- 3) Release microbial aerosol: turn on the microbial aerosol generator, then turn on the ceiling fan, turn off the fan after 5 min, and let stand for 5 min.
- 4) Original Bacteria aerosols collected by six-stage sieve sampler.
- 5) The air purifier is adjusted to the highest air cleaning mode setting for test (test group), Bacteria aerosols (control group and test group) are collected at 60 min respectively.
- 6) Choose 2 PDA plates (the same batch) as the negative control, and culture them on the same condition with the samples.
- 7) Run the test three times and take the mean as the final result.

5. Computational Formula

$$\text{Natural decay rate } N_t(\%) = \frac{V_0 - V_t}{V_0} \times 100$$

Where: V_0 = original bacteria count of control group; V_t = bacteria count after treatment of control group.

$$\text{Eliminating Bacterial Rate } K_t(\%) = \frac{V_1 \times (1 - N_t) - V_2}{V_1 \times (1 - N_t)} \times 100$$

Where: V_1 = original bacteria count of test group; V_2 = bacteria count after treatment of test group.

To be continued



中国认可
国际互认
检测
TESTING
CNAS L0823



202019001121

Test No. KJ20201603

GUANG ZHOU INSTITUTE OF MICROBIOLOGY

TEST REPORT

Date Received: Apr. 08, 2020

Date Analyzed: Apr. 09, 2020

Test Results

Number of Sample	Test Time (min)	Test Strain	Test Number	Control Group			Test Group		Eliminating Bacterial Rate K_t (%)
				Original Bacteria Count V_0 (cfu/m ³)	Bacteria Count after Treatment V_t (cfu/m ³)	Natural Decay Rate N_t (%)	Original Bacteria Count V_1 (cfu/m ³)	Bacteria Count after Treatment V_2 (cfu/m ³)	
KJ20201603-1	60	<i>Aspergillus niger</i>	1	7.59×10^4	5.27×10^4	30.57	7.92×10^4	7	99.99
			2	7.76×10^4	5.61×10^4	27.71	8.35×10^4	7	99.99
			3	7.83×10^4	5.79×10^4	26.05	8.13×10^4	7	99.99
			Mean						99.99

Note: The negative control group was sterile growth.

To be continued



中国认可
国际互认
检测
TESTING
CNAS L0823



202019001121

Test No. KJ20201603

GUANG ZHOU INSTITUTE OF MICROBIOLOGY

TEST REPORT

Date Received: Apr. 08, 2020

Date Analyzed: Apr. 09, 2020

Removal of Escherichia coli Phage Performance Test Evaluation Method:

1. Test Equipment
 - 1) Strain: *Escherichia coli* Phage
 - 2) Microbial aerosol generator: TK-3
 - 3) Culture media: NA
2. Test Conditions
 - 1) The volume of the test chamber: 30 m³
 - 2) Environment temperature: (20~25) °C
 - 3) Environment humidity: (50~70) %RH
3. Operational Conditions of the Machine
Set the switch to position "The highest wind speed", "negative ions".
4. Test Procedure
 - 1) Thawed the phage solution before test, diluted with sterile deionized water until liquid surface tension was 65 to 69×10⁻³ N / m.
 - 2) The equipments are placed in the test chambers respectively, close the door and open the HEPA filter. Simultaneously operate the environmental control devices, After reaching requirements and turn off the chamber environmental control system.
 - 3) Open the aerosol generator, while stirring side of the bacteria, spray dyeing bacteria after the end of the fan to continue stirring 2 min, and then set aside for 2 min.
 - 4) Open the sampling pump to collect the initial suspended phage from the air in the test chamber. Immediately after sampling, the prototype is to be tested and the timepiece is started.
 - 5) After 60 min of action, turn off the sample to be tested while opening the sampling pump and collecting the suspended phage from the air in the test compartment.
 - 6) Run the test three times and take the mean as the final result.
 - 7) Choose 2 NA plates (the same batch) as the negative control, and culture them on the same condition with the samples.
5. Computational Formula

$$\text{Natural decay rate } N_t(\%) = \frac{V_0 - V_t}{V_0} \times 100$$

Where: V_0 = original bacteria count of control group; V_t = bacteria count after treatment of control group.

$$\text{Killing Rate } K_t(\%) = \frac{V_1 \times (1 - N_t) - V_2}{V_1 \times (1 - N_t)} \times 100$$

Where: V_1 = original bacteria count of test group; V_2 = bacteria count after treatment of test group.

To be continued



中国认可
国际互认
检测
TESTING
CNAS L0823



202019001121

Test No. KJ20201603

GUANG ZHOU INSTITUTE OF MICROBIOLOGY

TEST REPORT

Date Received: Apr. 08, 2020

Date Analyzed: Apr. 09, 2020

Test Results

Number of Sample	Test Time (min)	Test Strain	Test Number	Control Group			Test Group		Virus Removal rate K_t (%)
				Original Virus Count V_0 (cfu/m ³)	Virus Count after Treatment V_t (cfu/m ³)	Natural Decay Rate N_t (%)	Original Virus Count V_1 (cfu/m ³)	Virus Count after Treatment V_2 (cfu/m ³)	
KJ20201603-1	60	<i>Escherichia coli</i> Phage	1	8.79×10^4	5.83×10^4	33.67	7.87×10^4	7	99.99
			2	7.23×10^4	5.18×10^4	28.35	7.55×10^4	7	99.99
			3	8.54×10^4	5.96×10^4	30.21	8.76×10^4	7	99.99
			Mean						99.99

Note: The negative control group was sterile growth.

End of report

Editor

薛华

Checker

张

Issuer

李

Date Reported





中国认可
国际互认
检测
TESTING
CNAS L0823



Statements

1. The report would be invalid under the following conditions: altered, added, deleted, copied, without the special seal for inspection or signatures by approver.
2. For the received sample, the sample information in the report is claimed by the applicant, the inspection unit is not responsible for its authenticity. The report is responsibility for the received sample only.
3. If there is any objection to the inspection report, it should be presented to the inspection unit within 15 working days from the issuance date, otherwise the report shall be deemed as having been accepted. Microbiological item is not subjected to retest.
4. The report and the name of the inspection unit shall not be used for product labels, advertisements, awards and merchandise publicity.。
5. The items marked with “*” in the report are not accredited by CNAS or CMA, The items marked with “#” are accredited by CNAS, The items marked with “+” are accredited by CMA.
6. The test data and results of items which are not accredited by CMA, only used as scientific research, teaching or internal quality control.
7. Any ambiguity by the language which used in the report, the Chinese shall prevail.

Contact Address, NO.1Jiantashan Road, Huangpu District, Guangzhou City, Guangdong Province

Test Address, (only fill in when it's different from the contact address)

Postal Code, 510663

Tel., (8620)61302671

URL, <http://www.ggtest.com.cn>

GUANG ZHOU INSTITUTE OF MICROBIOLOGY
TEST REPORT

Date Received: Jun. 17, 2020

Date Analyzed: Jun. 21, 2020

Name of Sample	Air purifier	Source of Sample	Delivery
Applicant	Air Doctor LLC	Client	Michael pedersen
Manufacturer		Brand	AirDoctor
Type and Specification	AD3000	Quantity of Sample	1PC
Date of Production	—	State of Sample	Machine
Batch Number	—	Packing of Sample	In box
Sample Picture			
Standard and Methods	1. Referring to GB/T 18801-2015 Air cleaner 2. Referring to <Technical Standard For Disinfection> 2002-2.1.3 Air disinfection effect evaluation test		
Items of Analysis	Removal Rate (<i>Influenza A virus</i> A/PR8/34 H1N1)		
Remarks	Test voltage: 120V, Test frequency: 60HZ.		

To be continued

GUANG ZHOU INSTITUTE OF MICROBIOLOGY
TEST REPORT

Date Received: Jun. 17, 2020

Date Analyzed: Jun. 21, 2020

Test Method for Purification Effect of Airborne Virus Aerosols

1. Test Equipment

- 1) Strain: *Influenza A virus A/PR8/34 H1N1*
- 2) Cells: MDCK

2. Test Conditions


- 1) Environment temperature: (23~25) °C
- 2) Environment relative humidity: (50~60) %
- 3) Test time: 60 min
- 4) The volume of the test chamber: 30 m³
- 5) Machine setting: "The highest wind speed", "Negative ions".

Test Results


Virus	Test Time (min)	Test Number	Virus Titer of Control Group			Virus Titer of Test Group		Removal Rate (%)
			Original Concentration (TCID ₅₀ /m ³)	Final Concentration (TCID ₅₀ /m ³)	Natural Decay Rate (%)	Original Concentration (TCID ₅₀ /m ³)	Final Concentration (TCID ₅₀ /m ³)	
A/PR8/34 (H1N1)	60	1	3.69×10 ⁶	5.85×10 ⁵	84.15	2.49×10 ⁶	/	≥99.99
		2	1.17×10 ⁶	1.73×10 ⁵	85.21	3.69×10 ⁶	/	≥99.99
		3	1.98×10 ⁶	3.69×10 ⁵	81.36	5.46×10 ⁶	/	≥99.99

Note: "/" means not detected.***** End of report*****


Editor

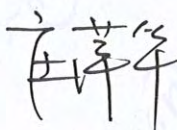

Checker

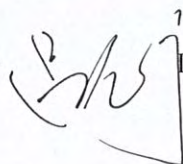

Issuer

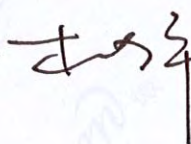

Date Reported



Statements

1. The report would be invalid under the following conditions: altered, added, deleted, copied, without the special seal for inspection or signatures by approver.
2. For the received sample, the sample information in the report is claimed by the applicant, the inspection unit is not responsible for its authenticity. The report is responsibility for the received sample only.
3. If there is any objection to the inspection report, it should be presented to the inspection unit within 15 working days from the issuance date, otherwise the report shall be deemed as having been accepted. Microbiological item is not subjected to retest.
4. The report and the name of the inspection unit shall not be used for product labels, advertisements, awards and merchandise publicity.。
5. The items marked with “*” in the report are not accredited by CNAS or CMA, The items marked with “#” are accredited by CNAS, The items marked with “+” are accredited by CMA.
6. The test data and results of items which are not accredited by CMA, only used as scientific research, teaching or internal quality control.
7. Any ambiguity by the language which used in the report, the Chinese shall prevail.

Contact Address, NO.1Jiantashan Road, Huangpu District, Guangzhou City, Guangdong Province

Test Address, (only fill in when it's different from the contact address)

Postal Code, 510663

Tel., (8620)61302671

URL, <http://www.ggtest.com.cn>

May 11, 2017

EN1822 European HEPA Test
LMS Technologies, Inc.

Test Type :	EN1822	Test Requested By:	Ideal living management
Test Number:	T051117A	Filter Mfgr:	
Flow Rate/Velocity:	60 fpm, 30 cm/s	Filter/Media ID # :	Filter #2
Test Aerosol:	KCl, Neutralized	Filter/Media Size:	13.5" x 16.25" x 1.5"
ΔP ("H₂O):	0.0850", 21.3 Pascals		

<i>Size Rang(μm)</i>	<i>Initial</i> <i>Fractional Efficiency(%)</i>
0.0030	100.000

